

[2008 Chevrolet Corvette](#) | [Corvette \(VIN Y\) Service Manual](#) | [Engine](#) |
[Engine Controls and Fuel - 4.8L, 5.3L, 6.0L, 6.2L, or 7.0L](#) | [Diagnostic Information and Procedures](#) |

Document ID: 1964706

Inspection/Maintenance System DTC Table

| System | DTCs Required to Set System Status to YES |
|---|--|
| <p>If an I/M System Status indicator did NOT update to YES during the Inspection/Maintenance (I/M) Complete System Set Procedure, review each indicator and reference this table to determine each DTC associated with the I/M System Status Indicator. Each DTC listed below has specific conditions that must be met for the diagnostic to run. Included within the conditions are additional DTCs which, if set, may inhibit the DTCs listed below from running. Reviewing and operating the vehicle within the Conditions for Running for each DTC listed below will allow the I/M System Status Indicators to transition to YES.</p> | |
| Catalyst | DTC P0420 or P0430 |
| EVAP | <ul style="list-style-type: none"> • DTC P0442 • DTC P0446 • DTC P0451, P0452, P0453, or P0454 • DTC P0455 |
| Oxygen Sensor | <ul style="list-style-type: none"> • DTC P0131, P0132, P0137, or P0138 • DTC P0133, P0134, P0140, P1133, P2270, P2271, P2A00, or P2A01 • DTC P0151, P0152, P0157, or P0158 • DTC P0153, P0154, P0160, P1153, P2272, P2273, P2A03, or P2A04 |
| Oxygen Sensor Heater | <ul style="list-style-type: none"> • DTC P0030, P0036, P0053, P0054, P0135, or P0141 • DTC P0050, P0056, P0059, P0060, P0155, or P0161 |