

# Swingtan's L76 / E38 VVE Dial in Guide

This guide will help with correcting the VVE table in E38 based vehicles when using EFILive. In particular, it deals with the L76 motor as fitted to the VZ Holden range, though can be used for the L98 as fitted the VE Holden range and possibly to all other E38 ECM based vehicles. This document should be read in conjunction with the "Virtual VE Tutorial" provided by EFILive, you should also read through this entire document a couple of times before actually starting any work.

**Ensure the car is up to normal operating temp before starting this.**

## Set-up

### Disable Fuel Trims

#### **LTFT**

Long Term Fuel Trims will affect the overall AFR of the motor. It will do this automatically, meaning you really don't know what it's getting up to. You need to turn off the trims to correct the VVE table and MAF. You can leave it off for good once this is completed as the LTFT are there to correct the factory VVE settings. The LTFTs are applied to all fuelling settings including Power Enrichment.

#### **Parameter: B1508**

Set to 140' (basically anything well over normal running temp.)

#### **Parameter: B1509**

Set to any value below any expected temp. IE. -40'

#### **Parameter: B1510**

Set all cells to 140kPa. This will prevent LTFT from ever becoming active in a N/A car. If you are running any sort of boost, then you will need to set it above your max boost pressure.

**STFT**

Short Term Fuel Trims do much the same thing as LTFTs but only average their adjustment over a short period and don't run during PE. Their use can be good once the VVE is dialled in, as they will help correct for things like air temp, pressure, humidity etc. For dialling in though, they need to be off.

**Parameter: B1501**

Set all cells to max i.e. 65535

**Parameter: B1502**

Set all cells to 140' (basically anything well over normal running temp.)

**Parameter: B1503**

Set all cells to max i.e. 65535

**Parameter: B1504**

Set all cells to 140' (basically anything well over normal running temp.)

**Parameter: B1505**

No Change

**Parameter: B1506**

Set to 0.1

**Parameter: B1507**

Set to max IE. 255

**Parameter: B1513**

Set to 0

**Parameter: B1514**

Set to max IE. 1500

These setting should prevent Closed Loop mode in the ECM. This is needed to dial in the VVE and the MAF. To confirm that the ECM remains in Open Loop mode, log "FUELSYS" and under the "data" tab it should remain reading "OL". If it goes into "CL" the ECM will be using the O2 sensors to adjust fuel levels. This is not good at this point.

**DFCO**

Deceleration Fuel Cut Off will upset the logging process as the AFRs will hit 25:1 when slowing down. It's a good idea to turn them off.

**Parameter: B2405**

Set to 140' (basically anything well over normal running temp.)

**Parameter: B2406**

Set to 140' (basically anything well over normal running temp.)

## Set Command AFRs

There are 2 thoughts on setting the AFRs for dialling in the VVE and MAF. You can set a fairly rich commanded AFR, to ensure you don't run lean, or you can set a "normal" AFR and keep a close eye on the Wide Band readings. If they start to go lean, get off the power.... The settings here should be fine for a fairly stock car, big cams and FI will need richer settings.

### Cruise AFR

I commanded 14.5:1 for cruise. This is marginally richer than Stoich and should work fine. This section relies on the car being up to normal operating temp.

#### **Parameter: B0141**

Set all cells to 14.5 (assuming you have EFILive set to work in AFR)

#### **Parameter: B0143**

Set all cells to 14.5 (assuming you have EFILive set to work in AFR)

#### **Parameter: B0146**

Set all cells over 80' to 1.00

This should command 14.5:1 AFR for all fuelling once the car has entered normal run mode, except for Power Enrichment mode.

### Power Enrichment

I commanded 12.5:1 for PE mode to ensure I didn't run lean. You will also want to control PE a little better than stock. I run the TPS settings very low and use MAP kPA to control PE. This has worked very well for me.

#### **Parameter: B0156**

Set all cells to 4.0% (note that there appears to be an offset in the TPS settings in the tune compared to measured TPS in Scan Tool. 4% in the tune is about 30% - 35% in real life)

#### **Parameter: B0157**

Set to 75kPA

#### **Parameter: B0161**

Set to 0.5 % (note that there appears to be an offset in the TPS settings in the tune compared to measured TPS in Scan Tool. 0.5 in the tune is about 10% - 15% in real life)

#### **Parameter: B0169**

Set to 0.1 to ramp in the fuel quickly. This will help when taking readings.

#### **Parameter: B0170**

Set to 0.1 to ramp out the fuel quickly. This will help when taking readings

#### **Parameter: B3618**

Set all cells to 12.5:1 AFR

#### **Parameter: B0804**

Set to "No" to turn off Cat Protection Enrichment.

These settings should fix the commanded AFRs to either 14.5:1 or 12.5:1. This will make reading the off sets easier later on. Turn off any other settings that may affect AFRs while testing.

## Disable the MAF

First step needed is to disable the MAF and only run on the VE table.

### **Parameter: C0301 & C0302**

Swap the values for these to calibrations,

- C0301 = 10
- C0302 = 13500 ( or whatever C0301 was )

Note that this should work OK, providing your MAF hasn't actually failed. If your MAF has failed, it may "enable" the MAF calculations.

### **Parameter: C0303 & C0305**

Set to "10"

### **Parameter: P0101, P0102 and P0103**

Set all to "No MIL"


These settings will need to be "undone" if the MAF is going to be used again.

Finally, you may need to either unplug the MAF and rig up a separate IAT sensor, or remove the "YELLOW" wire from the MAF plug and replace the plug. Removing the signal wire from the MAF is very easy to do and can be restored in very little time. If your ECM simply won't fail the MAF in the tune, this is your other option.


1. Unplug the MAF and look at the plug. It has a "pink / purple" centre section covering the contacts inside and on the rear, has the same colour retainer for the wires. Both need to come off, note now how they fit so you get it right when it comes time to replace them.



2. Starting with the rear retainer, lift the end of the locking tab up with a small screw driver and prise the retainer back, away from the plug. Do this on both sides to free the retainer.

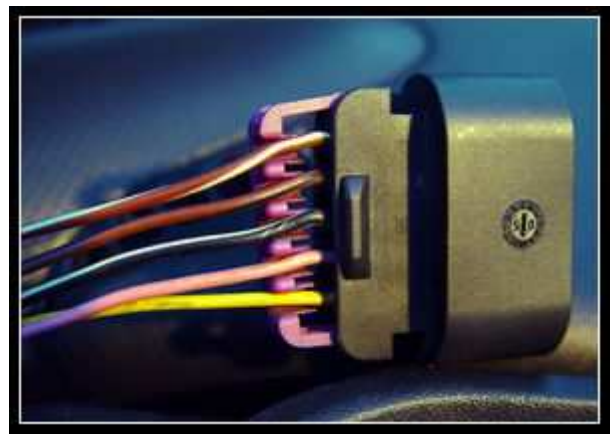

3. Turning the plug around, use the small screwdriver to prise out the inner contact cover. There are small holes in the side of the cover that will help. With the inner cover removed, you can now see the connector pin locking tabs.

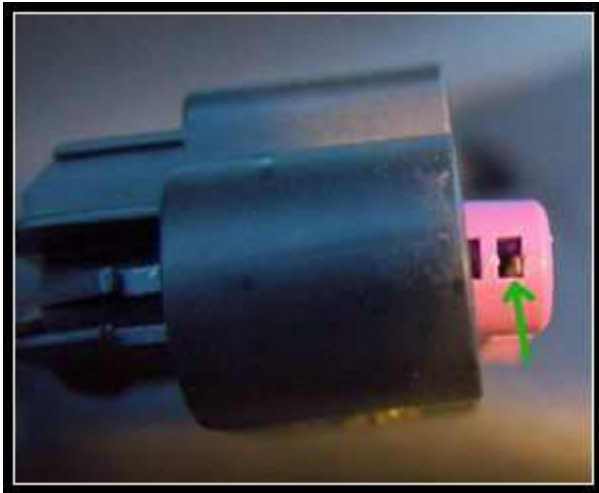

4. Take hold of the "Yellow" wire at the back of the plug and gently push forwards in it. Then using the small screwdriver, release the pressure on the locking pin and carefully draw the pin back out of the rear of the plug. The first picture below shows the locking tab that locks the connector in place. Once the wire is removed, tape it back against the rest of the loom to keep it out of the way.



5. Now just replace the 2 plastic covers to their original positions and plug the MAF back in. Confirm you have a valid IAT reading and that the MAF frequency is "0"

To return the MAF to normal operation, just put the pin back in. Note which way it fits and gently pull on the yellow wire to ensure it has locked into position.

# Logging

## Set Up PIDS

The minimum PIDs required are as follows....

- Commanded AFR
- WB O2 AFR
- MAP
- Engine RPM
- BEN Factor for your WB sensor

This should give you all the data you need to adjust the VVE.

**BIG NOTE:** The process of adjusting the VVE is not the same as for the LS1 VE table. You may be able to get the "Auto VE" process working to some degree, but in the end I didn't use it. I found it simply didn't adjust the cells in a way that worked well. It will take multiple goes to get the VVE pretty close.

Before actually driving the car, you should read the note on the next page.

Once the PIDs are set up. Go driving or test it on the dyno. This part is much the same as the LS1 Auto VE process, in that you want to run the engine at as many load points as possible to get sufficient data. Slow pedal movements help a lot and try and keep a single throttle position as long as possible. Get as much data as possible. It will help to use the E38 BEN MAP (Virtual VE Table – WB BEN.map) to see what cells need to be hit. This map can also be used to help adjust the VVE later on.

# Adjusting

## VVE

To make adjustments to the VVE, you need to start the Tune Tool with the V2 plugged into the laptop / computer. This will enable some additional features, not normally available. The additional settings are highlighted in red and will be easily visible.

### ***Parameter: B8020***

The stock settings here seems to assume that the MAF will work for all RPM ranges over 3000 RPM. This won't work when the MAF is turned off. Reset these boundaries to something that gives you a series of more sensible zones for your expected RPM range. Look at where you would normally be driving and set the zones accordingly. Something like 2000, 3500, 4500, 5500 RPM may work well. This table has a big effect on the VVE shape.

### ***Parameter: B8021***

As with the previous setting, this helps to shape the VVE table. Adjusting the setting to make the zone match expected driving conditions will help a lot. The stock settings are pretty good, but you may want to drop the "MAP 1" values to help set the idle airflow.

**NOTE:** Before moving on, you should do 3 things...

1. Go to B8101, press <F4>, select all cells and "copy with labels"
2. Save the current tune (after adjusting the previous 2 parameters) as a new tune file.
3. "Re-open" the same file, and go to B8101. It should look somewhat different to previously if you have changed the previous parameters. Select all cells and "Paste with labels" to return the VVE to a stock like map. Click on "Generate Coeffs" and "Generate VVE" to complete the process.


To be honest, you really should do this part before logging, as it will change the VVE settings a little bit.

You should now be ready to start adjusting the VVE.



## Parameter: B8101


This table sets all of the VVE up for N/A vehicles. As with the EFILive notes, look at how the graph has the shaded squares. These squares are the zones set up in the previous parameters. The important thing to remember, is that any one zone can only have a single curve in any direction. You can make a “dome” or a “hollow” in a cell, but not a “wave”. This is why it’s important to get the zones right.

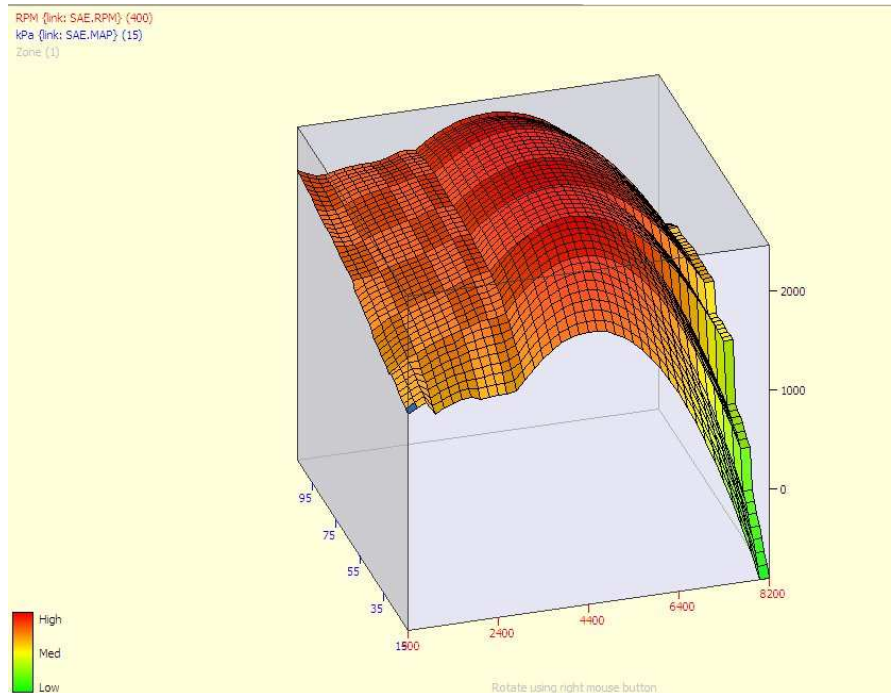

The stock L76 VVE

You can apply the figures from the BEN map as for the LS1 Auto VE process, but the generation of the Coeffs. Will have a smoothing effect on the changes. Trying the old trick of applying twice and smoothing didn't work too well either, so it became a more manual process to get things right.


- Apply the BEN map (copy the required BEN cells with labels, then “apply with labels and multiply” on the VVE). This will give a fairly spiky looking map.

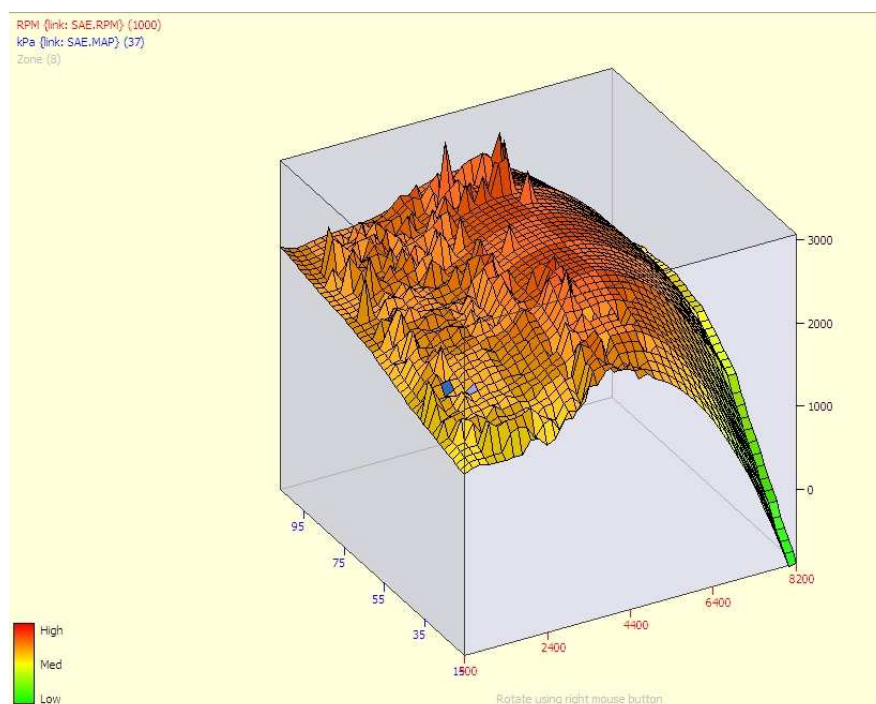

BENs Applied To VVE




- Next work on the areas where the spikes go up. In the “adjust” field at the top of the page, enter a figure of say 4. Then select the cells around the spikes, and click the “%” button to add 4% to the VVE values. Move around the spikes to “even” them up a bit.
- Then add a “-“ in front of the 4 and work around the dips.
- When adjusting cells, remember that if there is a change next to a “zone” boundary, you need to extend that change into the next zone. This will help to get the shape you need.

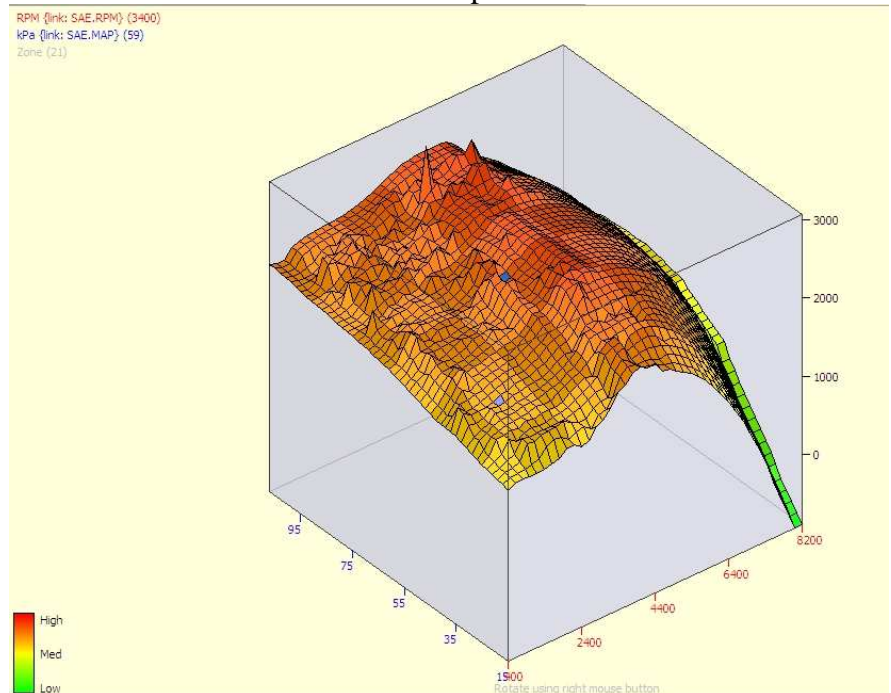

VVE After Manual Smoothing


- When this is done, click on “Generate Coeffs” and “Generate VVE” to see the difference you made. Note how much smoothing has gone on. If for some reason something looks way out, you can not “undo”. If it’s not too bad, you may be able to adjust it and re-generate. If the MAP is too bad, you will need to revert the tune and start again. The final map should be fairly smooth, though it will have some steps in it here and there. As long as they are not too big, it should be fine.

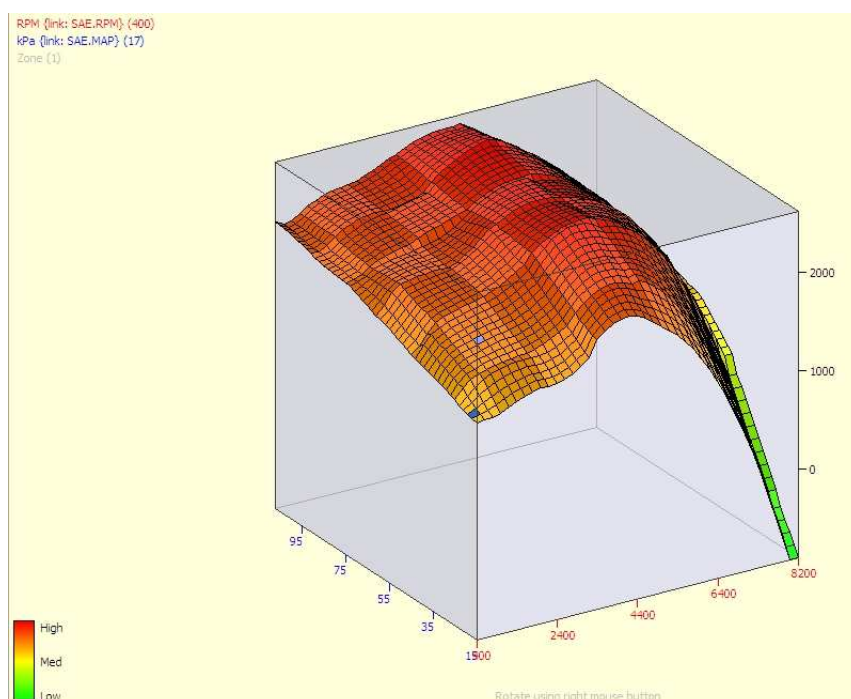

VVE After Generation Of Coeffs and Generation of VVE

A tip here is that you may need to make adjustments to cells well over your normal RPM range, to allow you to get the right settings around peak RPM. Just work slowly and try to only generate the Coeffs and VVE once per session. Multiple generations will tend to smooth the entire table, flattening it out.

Once you are finished, go testing again and then come back to re-adjust the VVE. This time though, when doing the manual adjustments, drop the setting to say "2%". As you keep going you may want to drop to 1%. After multiple runs, the VVE should start looking like this...

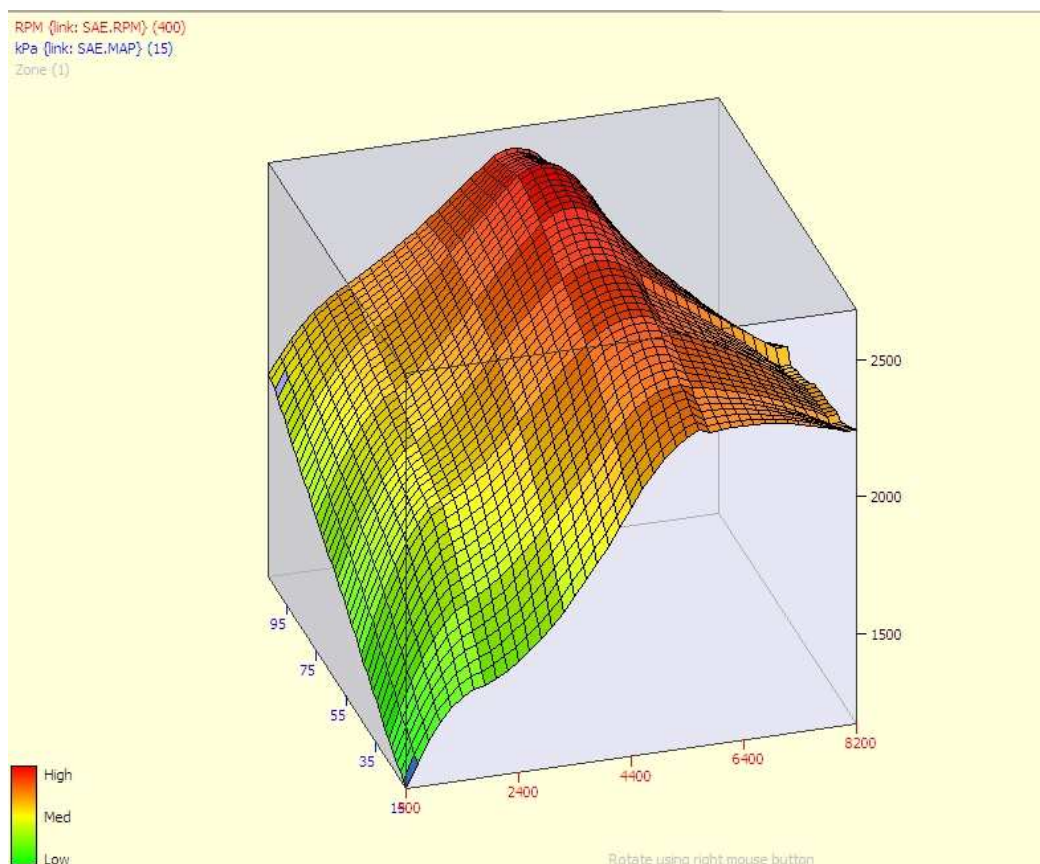

Modified VVE

You may find that the generation of the VVE applies too much smoothing in some areas, causing a shift in AFRs away from the commanded levels. This may be seen around the normal idle settings and cause an overly rich or lean idle. To fix these areas up you may need to manually over adjust these areas then allow the VVE generation to bring these cells back to the correct area.

At the same time, it's a good idea to alter the areas of the VVE above your normal RPM range to more suitable values. While your motor may never see 6500+ RPM, the shape of the VVE past here still influences the overall shape. The smaller the change in the VVE cells, the more accurate the VVE becomes. The stock VVE has negative values in the high RPM / low MAP area, these should be manually altered to flatten the top region of the VVE graph as shown above.

This is pretty much all there is to doing the VVE. Remember to save each adjustment of the VVE as a new file, so if something changes too much, you can revert back to the last known good version.

If you want to stay running full Speed Density, you can re-enable DFCO and that's about it. To run a plain MAFless tune, re-enable the O2's and STFT. Also don't forget to reset your AFRs. If you want to go back to the MAF, continue on

**Notes On Forced Induction**

1. The adjustments above are primarily for Normally Aspirated (NA) motors, though will be useful for Forced Induction as well. You should note that the table in B8101 peaks at a MAP setting of 105kPA, about the maximum you could expect from a NA engine (the highest I've measured is 103kPA with the car running). For FI, you will need to work out how much boost you will run and after setting the tune up for that, adjustments are made to the appropriate table. For a 2 bar tune, use B8103, this will allow MAP pressure up to 201kPA, for a 3 bar tune, use B8105, which allows a peak MAP pressure of 255kPA.

The adjustment process is much the same but you will need to set appropriate AFR's for boost. PE settings in the 10:1 range are probably a good start here.

2. Steve from Oztracktuning has the following tip.  
"Also a tip for Forced induction people, beware of a weird effect of burst knock activation mid acceleration not just at throttle tip in."

## MAF Adjustment

To dial in the MAF, first re-enable it by reversing the steps above. Then select at least the following PIDs for logging...

MAFFREQ2  
APCYL\_DMA  
MAF  
AFR  
WB O2 AFR

Follow the same process for logging as for the VVE, you can use the BEN map to try and hit as many cells as possible. While a new MAP could be made up with a new BEN for the MAF, I found it was just as easy to look at the Dash page and see where the WB AFR differs from the commanded AFR. Then you just adjust the MAF settings to correct for any drift. The stock MAF is very close though and only small adjustments should be needed.

For the L76, adjustments are in 2 tables

### ***Parameter: B1097***

For MAF frequencies from 1000Hz to 5800Hz

### ***Parameter: B1098***

For MAF frequencies from 5800Hz to 12200Hz

For the L98 there is only one table for the lot.

### ***Parameter: B1097***

For MAF frequencies from 0Hz to 15000Hz

Once you are happy with the MAF settings, re-enable the O2s, STFTs and DFCO.

These adjustments should show a huge improvement in mid range torque and throttle response.

## Credits

Thanks to the following people for helping with this document.

- Jezza
- Hymey
- vxleather
- alian